

HOME DECORATORS

collection[®]


ARTISAN COFFEE TABLE

Assembly Instructions

HDC #: 08077 MFG #:AT7105


Please read over the instructions; it will be a time-saver in the long run.

Note: Before assembly, please be sure to work on a soft flat surface to avoid any damage to the finish.

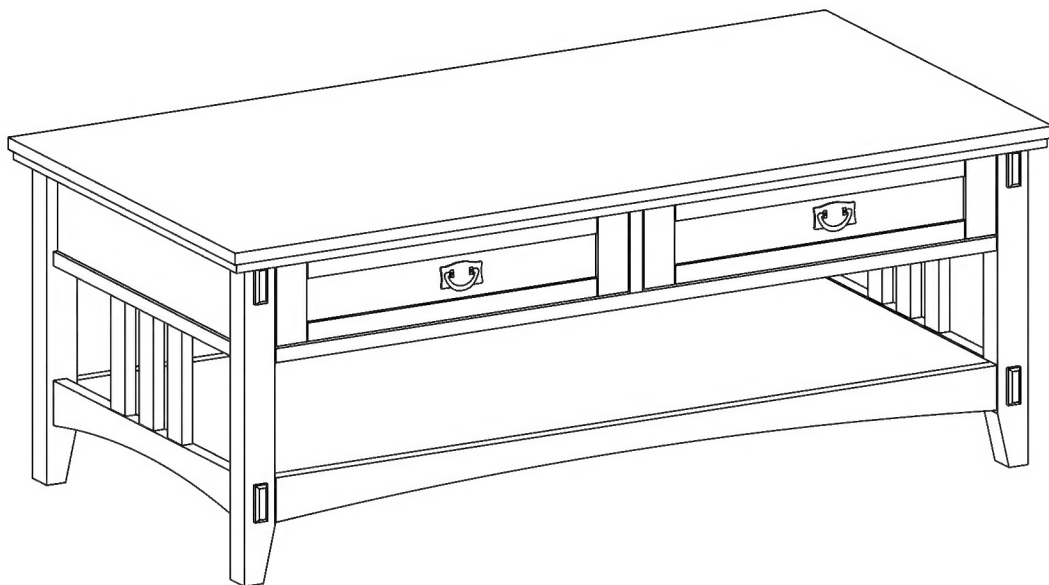


Parts Check List


Please remove all the parts carefully from the box. Thoroughly clean all wood surfaces to remove dust and dirt that may have settled onto the finish.

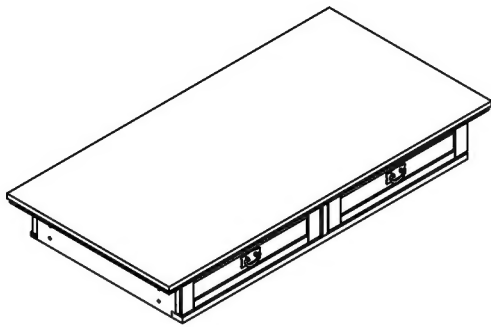


① Top Frame -1

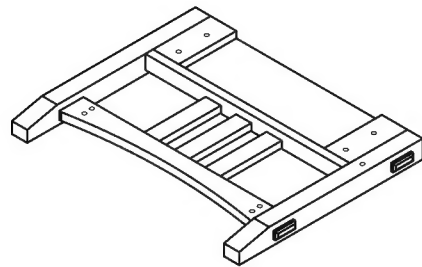

② Left Side Panel -1

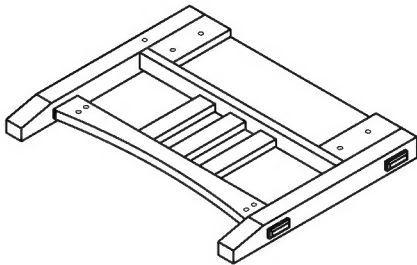


③ Right Side Panel -1

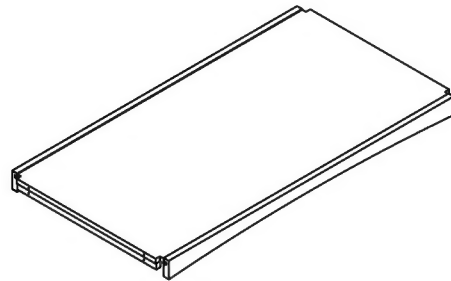



④ Bottom Frame -1


Hardware Check List


Please take all the hardware listed below out of the hardware bag.


A 
Allen Bolt-12
(Ø1/4"×1-1/4"L)

D 
Wood Dowel-6
(Ø8×30mm)


B 
Lock Washer-12 (Ø1/4")

E 
Glue-1(10g)


C 
Flat Washer-12
(Ø1/4"×16D)

F 
Allen Wrench-1


1. Fill the middle holes on both Top Frame (1) and Bottom Frame(4) 1/4 with Glue(E). Then insert Wood Dowels(D).
2. Pull out the drawer and disconnect the glide by pressing the plastic tab exposed inside the glide(see the illustration). Since all glides are identical, the plastic tab will be inverted on one side of the drawer. See figure below:

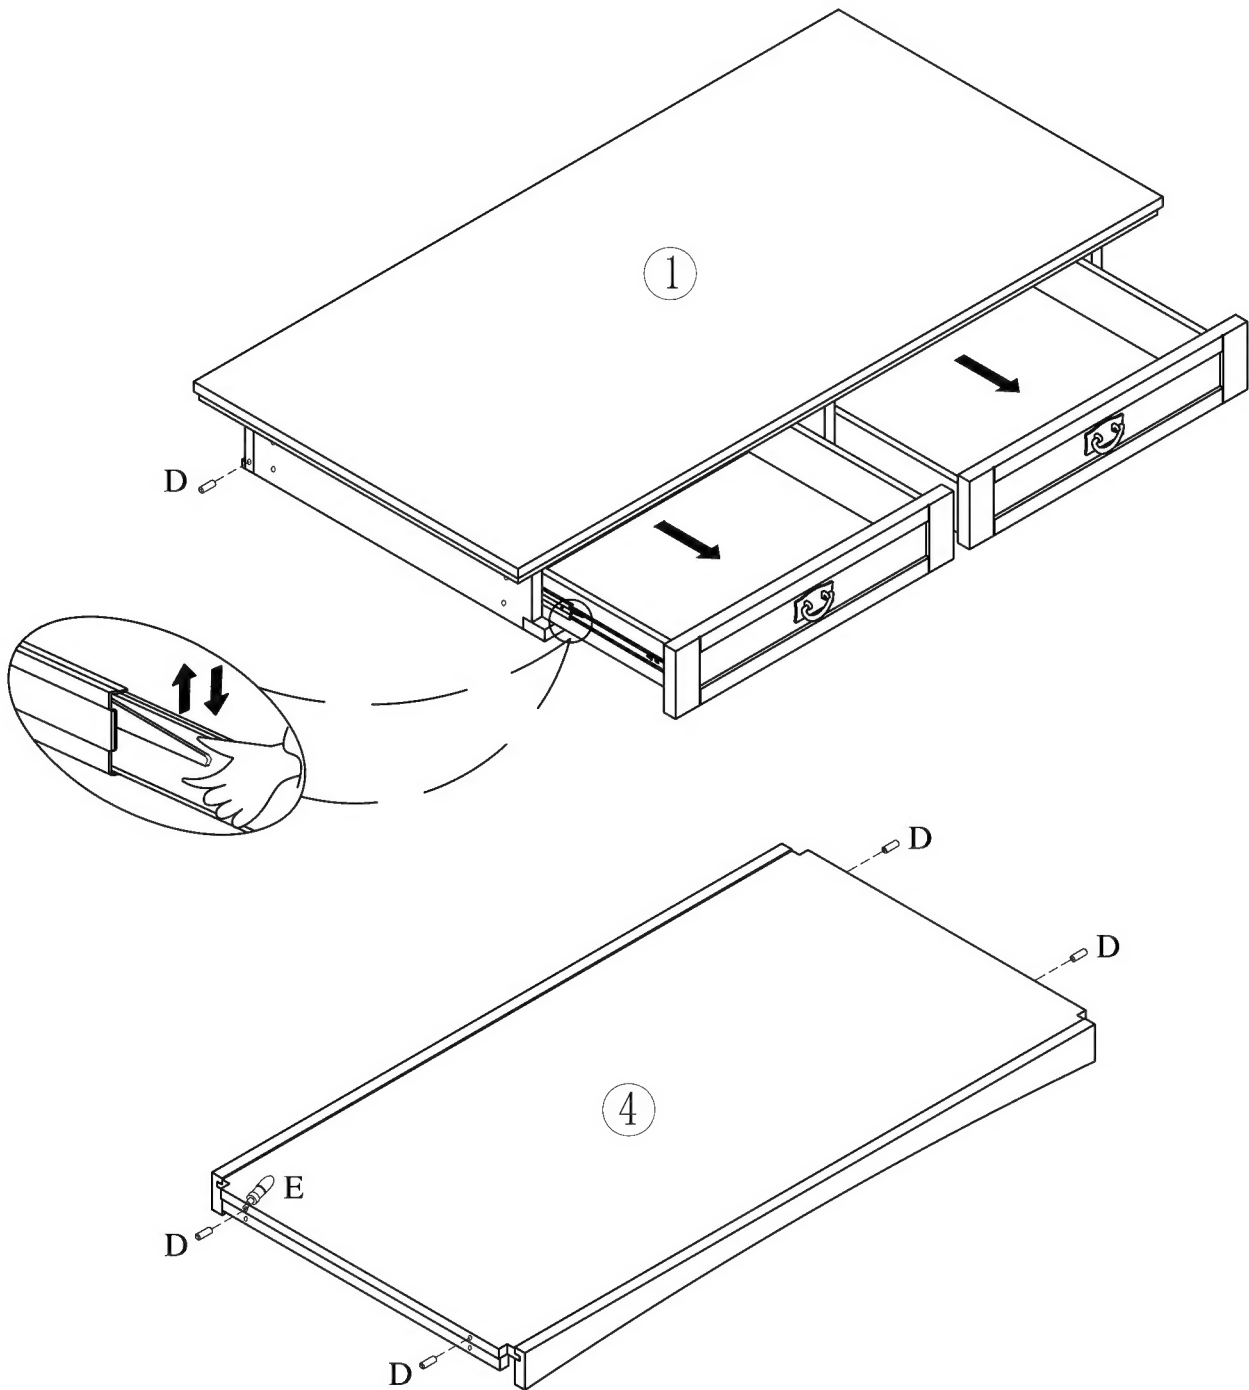

3. Attach the Side Panel(2&3) to the Top Frame(1) and Bottom Frame(4) with Allen Bolts(A) through Lock Washers(B) and Flat Washers(C) by use Allen Wrench(F).
See figure below:

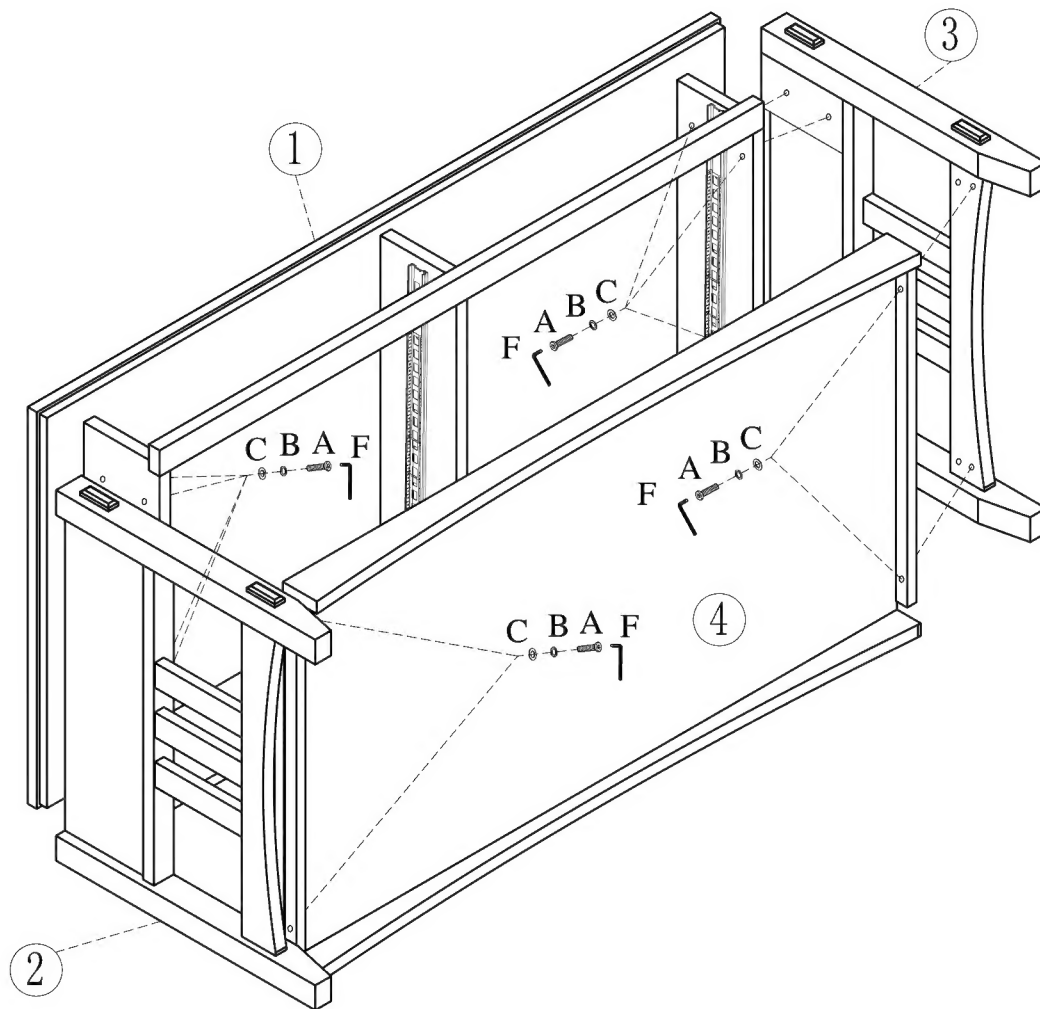

4. Place the drawers into the unit.
See figure below:

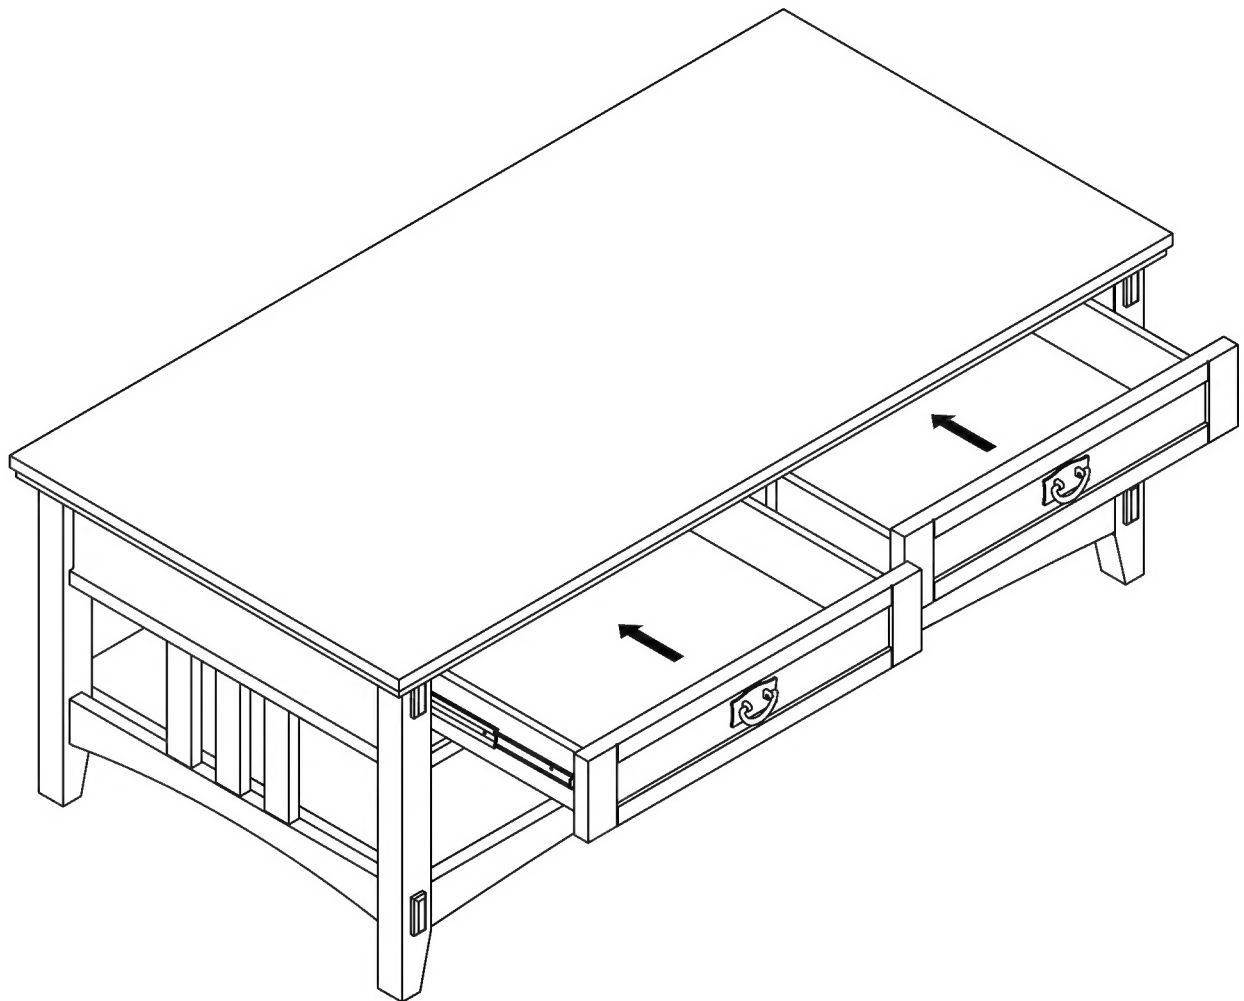

Assembly is now complete!